



## WARRANTY

**Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)**

### LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fee may apply.

### LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

**Customer Support: [ovente.com/support](https://www.ovente.com/support)  
Visit us at [ovente.com](https://www.ovente.com)**



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@OventeTweets](https://twitter.com/OventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

# OVENTE®

## Illuminated Cordless Electric Kettle, 1.7L

### KP72 Series



Before using please read the instruction manual and keep it for future use.



## **IMPORTANT SAFEGUARDS**


*When using your kettle, basic safety precautions should always be followed, including the following:*

- Read the instruction carefully and thoroughly, before any operation of the kettle.
- Before connecting the kettle to a power source, check whether the voltage indicated on the appliance (bottom of the kettle and base unit) corresponds with the main voltage in your home.
- Do not touch hot surfaces or hot water. Use handles. Care must be taken since burns can occur from touching hot parts or from spilled hot liquid.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plug, power base, or electric kettle in water or other liquid.
- Unplug from outlet when not in use and allow the kettle to cool before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for immediate assistance.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Switch OFF and unplug from the outlet before filling, emptying or cleaning, or when not in use.
- Do not overfill the kettle. Refer to the maximum level indicator.
- To avoid against fire, do not operate near explosive and/or flammable fumes. Do not operate or place any part of this appliance on or near gas, electric burner or in a heated oven.



## KETTLE MAINTENANCE

1. Wipe the exterior of the kettle with a soft, damp cloth or sponge.
2. Remove water spots with a moistened cloth.
3. Do not use abrasive scouring pads.
4. Never immerse the kettle in water or other liquids.
5. From time to time, depending on the nature of your water supply, limescale will be naturally formed and can be found mostly on the heating element; thus, reducing the heating efficiency. (Refer to the descaling instruction).

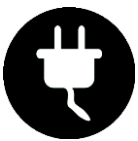

## TECHNICAL SPECIFICATIONS

**Model:** KP72

**Input Voltage:** 110-120V

**Power:** 900-1100W

**Hertz:** 50/60Hz

# **CLEANING**

## **Smell / Spotting / Descaling**

The residue, smell and red spots do not come from the Stainless Steel or glass. They can be caused by limescale which are natural deposits (calcium, magnesium, iron and copper) that may build up depending on the water in your area, which, over time, can cause spotting and residue.

While you do not need to worry about hygienic or health-related issues, we do strongly recommend descaling your kettle from time to time to avoid limescale build-up and other issues.

### **What you need:**

- 3 table spoons White Vinegar
- 1 cup Water

### **Steps:**

1. Mix 1 cup water to 3 table spoons vinegar solution
2. Pour solution into kettle and close the lid
3. Pour solution into kettle and close the lid
4. Bring solution to a boil and leave for 5-8 hours.
5. Dispose solution down the drain.
6. If the problem persists, repeat from step 1 until limescale dissipates.

**Caution: the solution may be extremely hot during this process.**

Should you have any questions and/or concerns please feel free to contact us.

- Never yank on the cord as this may damage the cord and will cause a risk of electric shock.
- Do not use appliance for other than intended use.
- To avoid possible steam damage, do not face the spout when operating the kettle.
- If operated on wooden furniture, use a protective pad to prevent damage on delicate finishes.
- Do not switch your kettle ON if it is empty.
- Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.
- While the water is boiling, do not attempt to open the lid of the kettle to avoid the steam scalding on your hand.
- Keep the kettle out of the reach of children. Do not leave children unsupervised with the kettle.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have are supervised by the person who is responsible for their safety.

## **SPECIAL SAFETY INSTRUCTIONS FOR THE KETTLE**

- It is recommended to use filtered or tap water when filling the kettle.
- The water level must be within the MIN and MAX marks.
- Switch off the kettle before removing from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the kettle must not become wet.
- Always make sure that the kettle is positioned properly on its power base.
- The kettle will automatically shut off once it reached the designated temperature.



## **USING THE KETTLE**

1. Refer to Figure 1 to open the kettle.
2. Fill the kettle with water up to desired level. Do not overfill to prevent the risk of spillage.  
Use the water level indicator to measure the desired amount of water.
3. Put the base on a dry and flat surface.
4. Place the kettle on the base.
5. Connect the kettle to a properly installed 110-120V 50/60Hz socket.
6. Insert the plug to the socket.
7. Switch on the kettle (Refer to figure 4). The LED light will light up in the kettle to indicate that it is working. After boiling, the kettle switches off automatically.
8. Disconnect the kettle from the main power supply

